

Operating Instructions MP3 Player

To use the iPod / USB - MP3 player, the radio must be turned on. A memory (USB stick with MP3 files) , a iPod or both must be connected with the iPod / USB- MP3 player.

By pressing the CD key is switched on the MP3 player.

In the first turn on or change the memory is started with CD1 and Track 01.

Otherwise, the player starts at the same place where he was stopped.

The player stops at the ignition switch off or switch to the radio or AUX.

The title will be played in sequence.

By pressing the **TUNE/DISC** button (on the left handlebar) can be skipped a title (button up) or repeated (button down).

By pressing longer the **TUNE/DISC** button, the CD number increased (button up) or decreases (button down).

With the A. SEL button, the playback mode can be switched (only USB Stick),.

In the upper left corner of the screen, no display, or T. RPT, D. RPT, play in order.

Title 1, 2, 3, etc. By repeatedly pressing the A.SEL button can be switched to RDM (T.RDM airbag). The tracks are played randomly.

Play stops when turned on the radio or AUX - or the ignition is turned off.

After the turn on the ignition or switch on CD, will start playing in the stopped location.

The (CD) keys 1 to 6 on the radio console are not supported.

Switch to USB or iPod operation

To toggle between the iPod and USB stick to do the following.

If the MP3 player is on (CD mode) switch to radio mode and immediately (after 1 -2 seconds) back to back CD mode.

After about one second, will be announced the current audio source (USB – iPod - AUX).

To switch the audio source (USB flash drive or iPod), must be pressed after the announcement, the TUN / DISC button (on the handlebars) are pressed upwards.

After each operation, the audio source will be announced.

To select the desired audio source, press after each announcement, the TUN / DISC button shortly until the desired audio source is reached.

After the last time the TUN / DISC button, after a short break (about 2 seconds) is the reproduction. Assuming it is a device (USB, iPod) connected.

Is selected AUX, no reproduction is possible. There are only iPod and USB.

Transfer MP3 files to USB memory stick

It can be used USB sticks to 16 GB.

The USB stick must be formatted FAT 16/32. There, the formats MP3, WMA, AAC and OGG to play.

Depending on the GL model can be created on the USB stick 6 or 10 folders (directories, playlists). In the navi and airbag models can be managed only 6 folders.

On the USB memory stick must be made 10 folders (airbag 6 folders), named with 1- Abcd... to 6 – Xyz.... .

In each folder are copied any MP3 files.

If more than 99 titles are in the folder, those will be played according to the series.

The GL1800 display can show only 99 Tracks per CD (folder). There's an overflow from Track 99 to 100. It is show Track 1, but played is Track 100.

A targeted find titles is then only conditionally possible.

The situation is similar with the iPod.


On iPod Playlists can be created. Similar to the USB stick.

The battery from the iPod is charging

USB Memory stick set up



Create 6 (10) folder on the USB drive

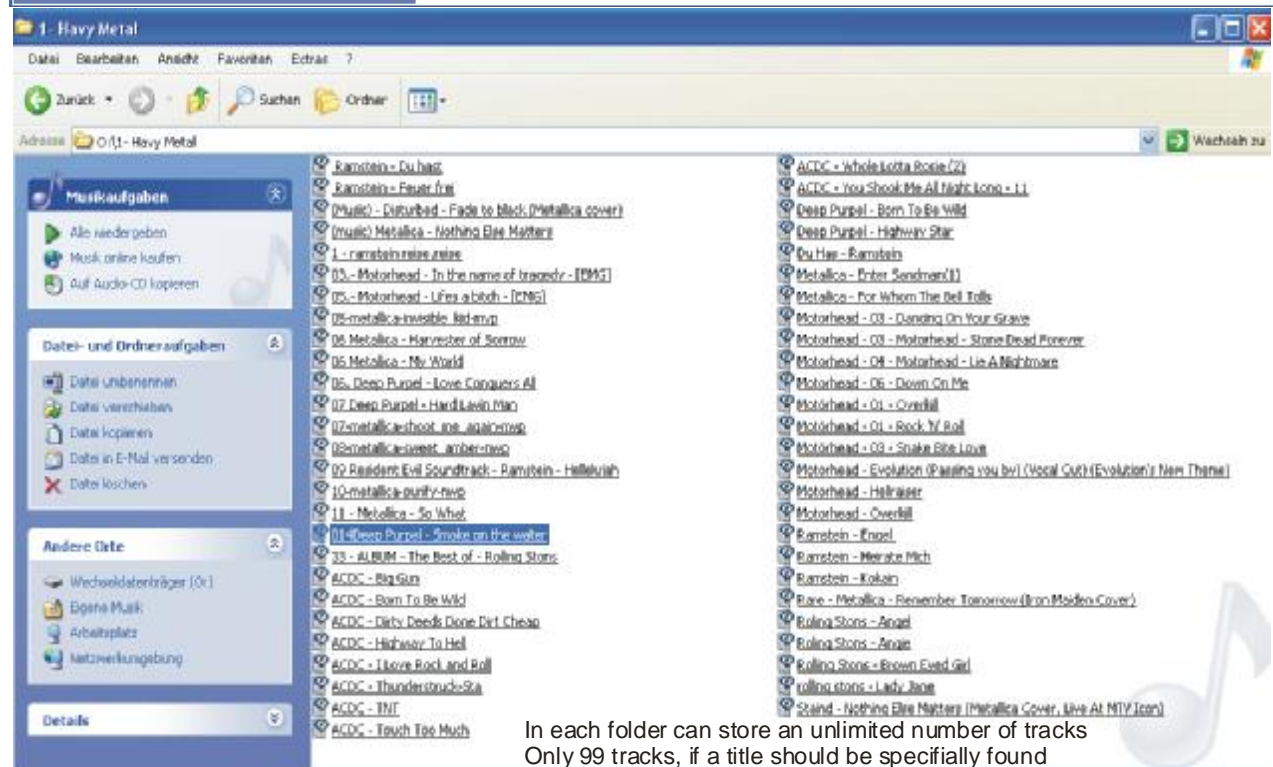

In each folder can store an unlimited number of tracks
Only 99 tracks, if a title should be specially found

Installation instructions iPod / USB MP3 player in GL1800

The iPod / USB- MP3 player is connected to the connector for the original CD changer.

Dismantle the seat.

The plug for the CD changer is located on the left side over the relay box. The plug is located in a black Rubber grommet.

The iPod /MP3 player can be mounted under the seat.

The USB and iPod cable can be led into the top box or one of the front storage compartments. It can then be easily connected the USB stick and the iPod.

Once all the plugs are connected, a USB stick or iPod (with M3 files) is connected, the iPod / USB- MP3 player is ready.

The MP3 player behaves like the original CD changer. It can be controlled with the CD key on the radio console and the Tune/Disc button on the left handlebar.

The operation and functions of the MP3 player can be seen in the manual.

Finally

If everything works, the CD changer plug push back into the Rubber grommet and attach the cable.

The iPod / USB- MP3 player module must be protected from moisture and dust. The module should be fixed with double sided tape. The cable should be free of tension. The seat should not press the case.

