

Assembly instructions for Bluetooth Junction-Box light GL1800

Use

With the *Bluetooth junction- box light*, any bluetooth enabled device (navigation device, mobile phone, which uses the headset protocol) integrated into the GL intercom. The playback is possible only in mono. A2DP stereo streaming is not supported. Bluetooth-enabled MP3 player will only work in mono or can not be coupled.

Installation

The junction box will be installed under the front left storage compartment. Remove the storage compartment. Under the compartment you will find a 6pol intercom plug and a 3pol power plug (12V ACC), disconnect the intercom plug and connect the open plug with the junction box. Connect the 3pol power plug (12V vehicle voltage).

Installation of the Bluetooth Control Panel

The BT panel is housed in the left front compartment.

For easy installation, the connector on the BT panel and the junction box can be unlocked and removed. The BT panel is mounted with the included (self adhesive) Velcro tape in the left compartment.

The BT panel is only required to pair the Bluetooth junction box with the Bluetooth device (GPS, mobile phone). Once the devices are paired, they connect automatically after turn on the ignition.

Bluetooth connection

To start the installation for the first time, the following steps are necessary:

Connect the helmet (with the headset), start the ignition, switch on Intercom, set a medium volume (10).

On the Bluetooth device (which is to be connected) call the connection menu.

Press the small button on the BT panel 2 seconds. The Bluetooth junction box switches off, it is heard in the headset a falling tone. Press the button once again and hold it down until the green LED (on the panel) lights up continuously.

In the connecting device to start the search for Bluetooth accessories.

The Bluetooth junction box is recognized as **BT005**. Confirm the connection with BT005.

When the green LED flashes (at long intervals), the connection is established.

Testing the Bluetooth Connection

Put on the Helmet (with headset).

In a navigation device trigger an announcement. A mobile phone call.

The Navi announcement should be audible. The phone should ring.

Listening volume can be set directly on a Bluetooth enabled device.

The talk and listen volume in the junction box is already configured optimally.

To adjust the volume on the headset are located on the right side, two adjusting controllers.

With the Mic. control, the volume (say volume) of the microphone can be changed.

With the Spk. control, the listening volume to be adjusted

Finally

When everything works the junction box must be protected from moisture.

The box should be installed so that there cable entry from below.


so effectively prevents moisture can penetrate into the junction box. The junction box placed under the storage compartment. Check whether the storage compartment, it should fit. Then the junction box with mounting tape and cable ties to fix.

In case of occurring problems, please do not hesitate to contact us at +49(0) 4122 967690. We help you.



Klinkerstrasse 7, 25436 Moorrege, Germany
Phone 0049 4122 967690, Fax 0049 4122 967689
Mail irlbacher@w-irlbacher.de, www.w-irlbacher.de

Bluetooth - Junctionbox light

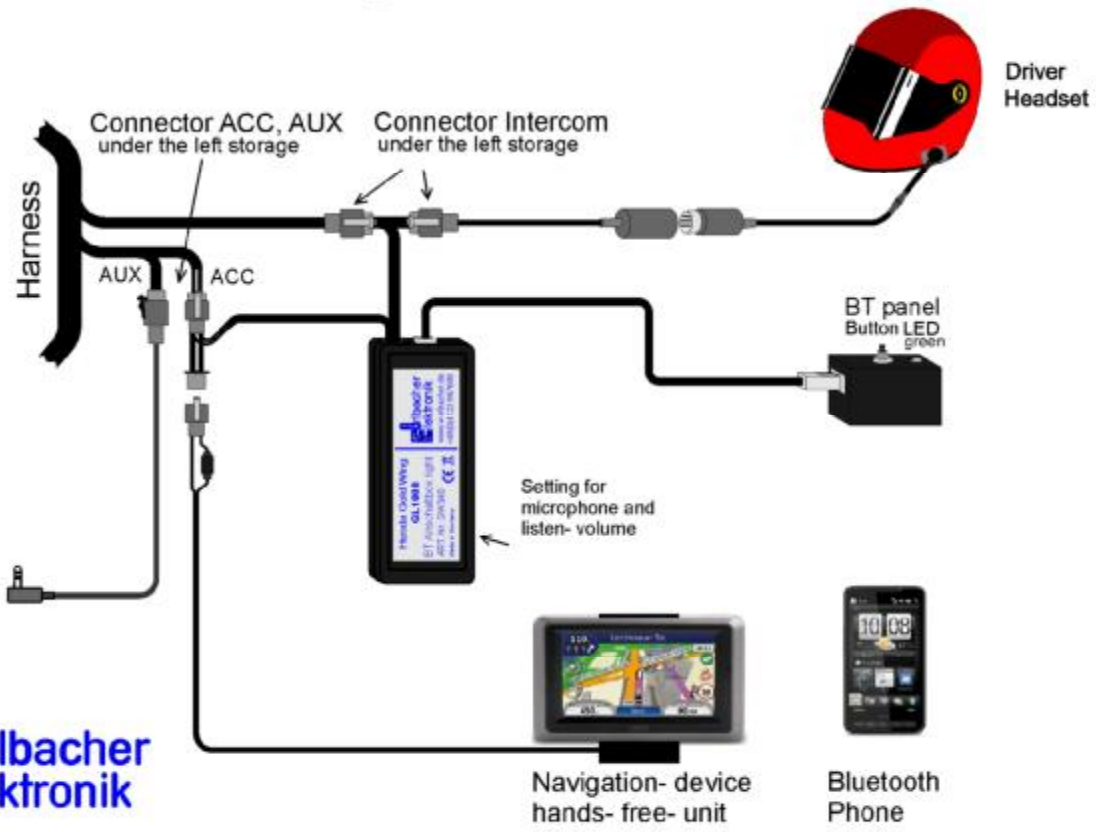

Klinkerstrasse 7, 25436 Moorrege, Germany
Phone 0049 4122 967690, Fax 0049 4122 967689
Mail irlbacher@w-irlbacher.de, www.w-irlbacher.de