

Assembly instructions for Blue Tooth Connection Box GL1800

Installation of the Bluetooth-Junction-Box

The junction box will be installed under the front left storage compartment. Remove the storage compartment. Under the compartment you will find a 6pol intercom plug and a 3pol power plug (12V ACC), disconnect the intercom plug and connect the open plug with the junction box. Connect the 3pol power plug (12V vehicle voltage).

Installation of the Bluetooth Control Panel

Normally, the control panel can be built into the left storage compartment (automatic call acceptance). If being on the phone should also take place while driving, install the control panel close to the radio console. This can be done by using the additional self-adhesive Velcro tape. However, you should usually be able to take the control panel down and place it in the storage compartment (in case of rain).

Operating Bluetooth connection to the cell phone

To start the installation for the first time, the following steps are necessary:

Connect the helmet (with the headset), start the ignition.

Switch the cell phone on and chose the adjustment BLUETOOTH in its menu. Activate Bluetooth. Within the Bluetooth menu chose the option "Searching for Audio-accessories" and start the search. The junction box will be called "**1420DV31.09**". Next you will be asked to enter the pin number. Enter the **pin number 0000**.

Afterwards, the connection to the junction box will be confirmed, the LED flash alternated green and red.

If needed, activate the automatic call acceptance.

If you would like your cell phone to switch itself on automatically as soon as the ignition is started, make the following adjustments:

"VISIBILITY OF THE PHONE for everyone visible", "CONNECTION without confirmation".

As soon as these adjustments are made, your cell phone will be switched on automatically with every start of the ignition. It will then be connected with the Bluetooth junction box and will be forwarded to the headset.

After turning off the ignition, the connection will be cut off.

Testing the Bluetooth Connection

To test the installation, call the cell phone from a second phone.

If all connections are made correctly, you should be able to hear the ringing of your phone in an acceptable volume within your helmet. With an activated call acceptance the ringing of the phone will be forwarded to the helmet (headset) after the first or second ring. Otherwise answer the call with the top switch of the control panel and check audibility. As soon as the connection is established, the LED of the control panel flash yellow.

Navigations-system


Every Navigations-system which disposes of an audio-exit can be connected.

If everything works correctly, protect the junction box with a plastic bag and fasten it with a cable fixer. Fasten the junction Box carefully under the storage compartment (if needed use 2-sided adhesive tape).

Assemble all de-installed parts.

In case of occurring problems, please do not hesitate to contact us at +49(0) 4122 967690. We help you.

Bluetooth Control

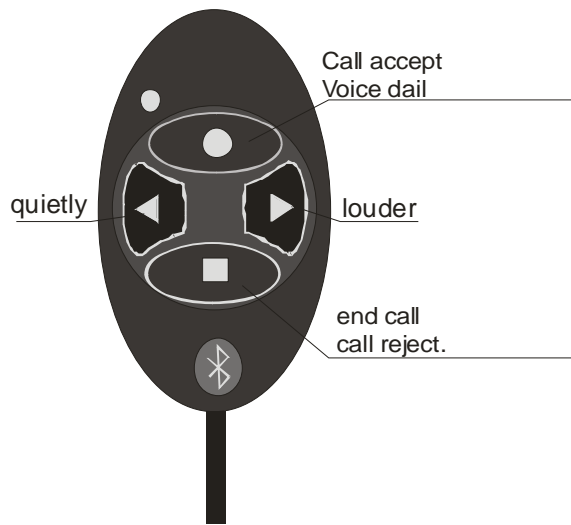

Bluetooth-Junctionbox Navi GL 1800

