

Assembly instructions for Bluetooth- Junction box Navi GL1800

Installation of the Bluetooth-Junction-Box

The Junction box will be installed under the front left storage compartment. Remove the storage compartment. Follow the driver's intercom cable to the 6 pin connector. Pull apart the connector. The free plug, connect with the Junction box. The 3-pin power connector (adapter) connect with the red three-pin ACC connector under the left compartment (follow the AUX cable, the red ACC plug is located in the same grommet).

Installation of the Bluetooth Control Panel

The Control panel can be built into the left storage compartment. If only being for the first connect to the TomTom Rider and the phone.

Bluetooth connection to the TomTom Rider

The Bluetooth contact to the Junction box done in the same way as the connection with the Bluetooth helmet headset.

If no Bluetooth device is still connected, the LED flashes red / blue. The Bluetooth module is ready for pairing with the navigation device

Select in the TomTom menu **connect with headset+**

The Bluetooth junction box is detected as **BT-AB-NAVI**.

Once the connection to Bluetooth box was built, flashes the LED blue. The box is connected to the TomTom and can be used.

Test the Bluetooth connectivity

Switch on the Ignition (ACC).

Connect the Helmet (with headset) with the intercom.

Trigger a Voice announcement on the TomTom Rider. The announcement would heard in driver helmet. The volume of the announcement may directly set on the screen of the TomTom Rider or on the rocker switch from the control panel.

If present a Bluetooth mobile phone can it connect with the (phone) free talk on the TomTom. Phone calls can be led on the helmet headset.

TomTom 500 Serie

A separate Bluetooth connection to the mobile phone must be made. Open Bluetooth menu in the phone. On the Bluetooth Panel, press the button for 5 seconds. The LED flashes red / blue. Search Bluetooth on the phone. The junction box is recognized as **BT-AB Navi**. Pair phone with junction box. **Pin 0000**. In the navigation device, confirm the Bluetooth connection again.

Option passenger listen

The junction box operates independently of the audio system and intercom.

A GPS message or phone call is always routed to the drivers headset , regardless of whether the radio or intercom is switch on or off. If the intercom is on, also the passenger can listen the GPS announcement or a phone call.

When this feature is not desired, the red wire loop must be cut at the junction box.


Finally

If everything works, the junction box to be protected from moisture. It is important to ensure that the junction box is mounted so that the cables run down out of the box. Can effectively prevent the penetration of water (mostly water droplets run the cable along). The junction box placed under the storage compartment. Check whether the storage compartment that fits into the fairing. Then lock the box and the cables with cable ties and mounting tape.

If there are any problems during installation or operation, please send a Email. I will help



Klinkerstrasse 7, 25436 Moorrege, Germany
Phone 0049 4122 967690, Fax 0049 4122 967689
Mail irlbacher@w-irlbacher.de, www.w-irlbacher.de

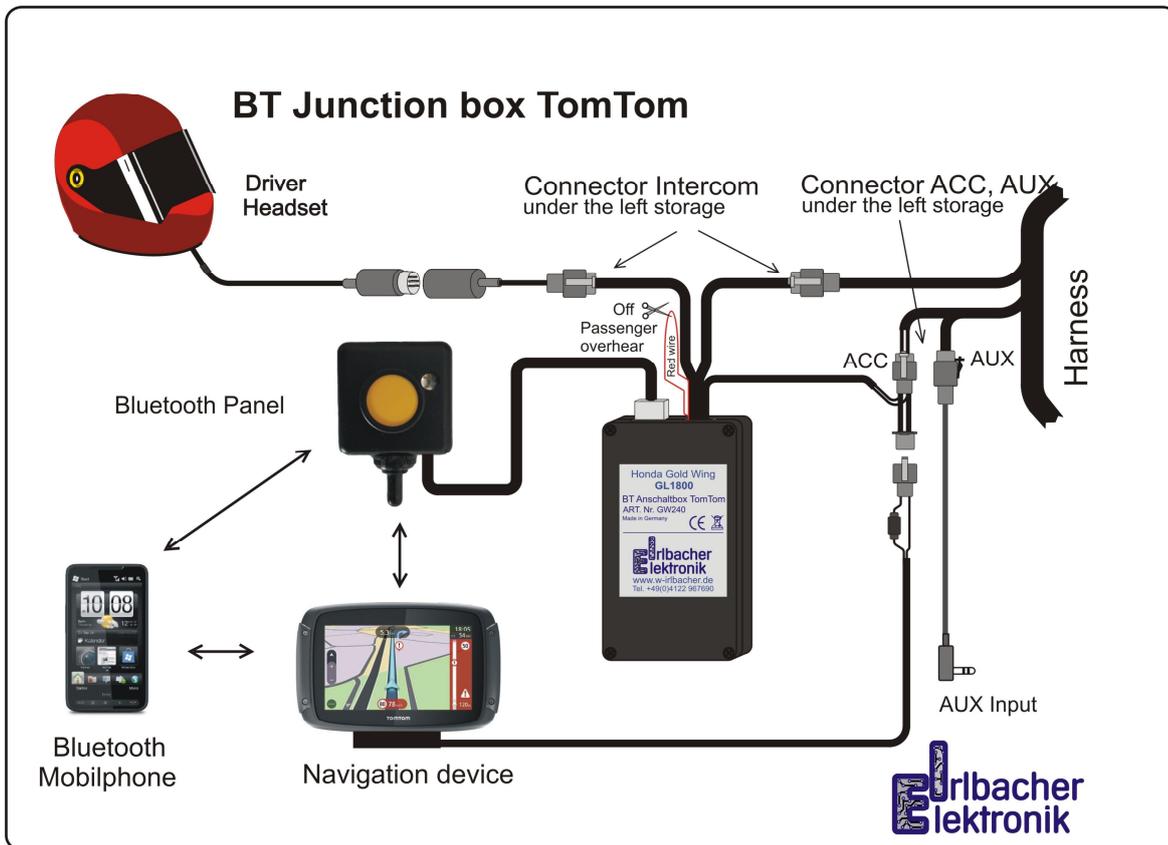

Klinkerstrasse 7, 25436 Moorrege, Germany
 Phone 0049 4122 967690, Fax 0049 4122 967689
 Mail irlbacher@w-irlbacher.de, www.w-irlbacher.de